

ENSTYLE LVT

Commercial Maintenance

- Sweep or vacuum to remove all grit, glue, and residue from floor. Thoroughly wash floor using Kraus Hard Surface Cleaner or a quality non-oil based neutral cleaner.
- Vinyl flooring requires effective cleaning and maintenance to ensure its durability, appearance, and safety. How frequently the floor must be maintained depends largely on the amount and type of traffic and the amount and frequency of soiling.
- Subsequent maintenance should involve consistent dirt removal, damp mopping when needed.
- The local conditions will determine what specific maintenance is needed. It is the responsibility of the maintenance contractor to set up a maintenance program that meets the needs of the facility.
- Regular maintenance to remove dirt and grit, prompt removal of spills and staining materials, and proper protection of the floor surface are all necessary steps for long time appearance retention.

Preventive care

- Make sure furniture legs have large surface, non-staining floor protectors. Replace small, narrow metal or dome-shaped glides with smooth, flat glides that are in flat contact with the floor. Glides should be equipped with self-adhesive felt pads to avoid scratching the surface of the floor. The pads should be checked periodically for grit and wear and replaced when necessary.
- Heavy furniture or appliances that are not moved often should be equipped with flat, non-staining composition furniture casters or cups of appropriate size – available in square from 1 1/2" to 2 5/8" and in round from 1 3/8" to 1 5/8".
- Mobile appliances and furniture should be equipped with easy swiveling casters. They should be at least 2" in diameter with non-staining hard rubber treads at least 3/4" wide. Do not use ball-shaped casters.
- Place mats at outside entrances to prevent dirt, grit and soil from being tracked onto your floor.

Caution: Enstyle, like other types of hard surfaced floors, can become slippery when wet. Allow time for the floor to dry after washing. Immediately wipe up wet areas from spills or wet feet. Place mats at outside entrances to prevent; water, snow, or ice from being tracked onto your floor. Improper polishes or finishes can also cause slipperiness.



ENSTYLE LVT

Commercial Maintenance

- Sweep or vacuum to remove all grit, glue, and residue from floor. Thoroughly wash floor using Kraus Hard Surface Cleaner or a quality non-oil based neutral cleaner.
- Vinyl flooring requires effective cleaning and maintenance to ensure its durability, appearance, and safety. How frequently the floor must be maintained depends largely on the amount and type of traffic and the amount and frequency of soiling.
- When Enstyle is installed in conventional commercial areas, we recommend a commercial type maintenance procedure. Maintenance in these settings should include the use of a good floor polish.
- After initial deep cleaning, the floor is then coated with 2-3 coats of polish. Subsequent maintenance should involve consistent dirt removal, damp mopping when needed, followed by an occasional re-coat of floor polish. At least once or twice a year, the floor should be stripped of all polishes and re-coated as a new floor. These procedures will help to ensure the look and durability of your floor.
- The local conditions will determine what specific maintenance is needed. It is the responsibility of the maintenance contractor to set up a maintenance program that meets the needs of the facility.
- Regular maintenance to remove dirt and grit, prompt removal of spills and staining materials, and proper protection of the floor surface are all necessary steps for long time appearance retention.

Preventive care

- Make sure furniture legs have large surface, non-staining floor protectors. Replace small, narrow metal or dome-shaped glides with smooth, flat glides that are in flat contact with the floor. Glides should be equipped with self-adhesive felt pads to avoid scratching the surface of the floor. The pads should be checked periodically for grit and wear and replaced when necessary.
- Heavy furniture or appliances that are not moved often should be equipped with flat, non-staining composition furniture casters or cups of appropriate size – available in square from 1 1/2" to 2 5/8" and in round from 1 3/8" to 1 5/8".
- Mobile appliances and furniture should be equipped with easy swiveling casters. They should be at least 2" in diameter with non-staining hard rubber treads at least 3/4" wide. Do not use ball-shaped casters.
- Place mats at outside entrances to prevent dirt, grit and soil from being tracked onto your floor.

Caution: Enstyle, like other types of hard surfaced floors, can become slippery when wet. Allow time for the floor to dry after washing. Immediately wipe up wet areas from spills or wet feet. Place mats at outside entrances to prevent; water, snow, or ice from being tracked onto your floor. Improper polishes or finishes can also cause slipperiness.